

MAXDATA Notebook Eco 4200X

User's Manual



Contents

Note	53
Symbols	55
Important Safety Information	57
Wireless LAN	59
Additional safety notes for units with wireless LAN	60
CE-labelling for units with wireless LAN.....	61
Restrictions	62
France	62
Italy	62
Netherlands	62
Radio frequencies for units with wireless LAN	63
Legal requirements - exception clauses	64
Shipping Contents	65
Preparation	67
Inserting the Battery.....	68
Removing the Battery.....	68
Power Supply.....	69
Switching the Computer on.....	70
Power Management	71
System Overview	73
Left Side	73
Right Side	73
Rear View	74
Underside	74
Explanation of LED Indicators	75
Hot Keys	76
Quick Launch Buttons.....	77
The Keyboard.....	78
The TouchPad.....	79
The TouchPad - Operation	79
The CD-ROM/DVD Drive	80
The PC Card Slot	81
Memory Card Slot	81
The Data/Fax Modem.....	82
The LAN Port	82
Autodim Function	83

UK

Installation Instructions	85
Restoring the Drivers.....	85
The Utility CD	85
Specifications	87
Fault Diagnosis and Troubleshooting	91
Index	93

Note

The company reserves the right to make unadvertised modifications to this document. Information contained in this document is intended solely for reference purposes and in no way constitutes a basis for asserting obligations on the part of the manufacturer or vendor. Neither the manufacturer nor the vendor accept liability for any errors or inaccuracies that this document may contain. Nor is liability accepted for damages or losses that arise from the incorrect application of this guide. No part of this document and the accompanying software may be copied, translated, or distributed without the prior permission of the dealer, manufacturer, or authors. Archive copies for private use are excepted from this rule. Brand or product names mentioned in this document may be names protected by copyright law or registered trademarks of other companies. These are mentioned only for identification purposes and have no recommendatory character in regard to the product or manufacturer.

© Maxdata 2004

Legal Information

Acrobat and the Acrobat Logo are trademarks of Adobe Systems Incorporated or its subsidiaries. In certain jurisdictions these trademarks may be registered.

Intel® and Pentium® are registered trademarks of Intel Corporation. MS-DOS, Windows®, Microsoft® Windows® 95, Microsoft® Windows® 98, Microsoft® Windows® Me, Microsoft® Windows® 2000, Microsoft® Windows® XP, and Microsoft® Windows® NT are registered trademarks of Microsoft.

Declaration:

This device meets the EN 55022 product standard for interference emissions, the EN 50082-1 basic standard for interference, and the EN 60950 low voltage directive standard.

If any modification that has not been agreed upon with the manufacturer is made to the device, adherence to these standards can no longer be guaranteed.

To ensure electromagnetic compatibility (EMC), please observe the information given in the handbook.

Sound Power Level

The workplace-based sound power level is less than 55 dB A.

Federal Communications Commission (FCC) Note

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

Warranty

The warranty period for the device is 24 months. In the case of damage occurring outside the scope of the warranty, it is the intention to offer repair of the devices through original replacement parts or exchange of modules or devices with cost for at least 3 years (from end of production).

Operator Note:

This device has been carefully RF suppressed and tested to avoid radio interference. However, please pay attention to the following concerning external data cables:

If it becomes necessary to replace a data cable specified by the manufacturer, the operator must ensure that replacement cables also match the original cable in terms of screening quality for correct radio interference suppression.

Use only screened cables and external devices that are identical with this product in terms of safety level and EMC behavior.

In the event of non-observance, compliance with the standards mentioned above is no longer guaranteed!

CD-ROM Drive:

Built-in CD-ROM drives are Class 1 laser products. Do not open the device and do not look into the beam, even using optical instruments.

Unless the drive is expressly designated for the simultaneous use of more than one CD, never insert more than one CD into the drive.



Returning the Device/Battery

We accept the return of all our products after they have been used if the condition corresponds to standard proper usage. Returned devices are either slated for further use or dismantled and recycled in an environmentally sound manner. The return is handled through your dealer.

Rechargeable and disposable batteries containing heavy metals should not be thrown in with household waste. They are accepted free of charge by manufacturers, dealers or their representatives for recycling or disposal.

The outside packaging and all inner parts of the box can be disposed of as waste paper.

Symbols

This user manual makes use of several symbols that indicate additional references or highlight important information.

Display	Injury to persons	Property damage	Use with:
	X		Imminent danger; Possible consequences: death or very serious injuries.
		X	Possible dangerous situation; Possible consequences: light to serious injuries
		X	Possible damaging situation; Possible consequences: product or surrounding objects can be damaged.

UK



Important Safety Information

Although the notebook is highly robust, it is not indestructible. To prevent damage from occurring, please pay attention to the following:

- Avoid exposing the notebook to strong shocks or vibrations.
- Keep it away from intense heat (radiators, direct sunlight).
- Protect the notebook from electromagnetic interference. This will also prevent data loss.
- Don't expose it to moisture. This is an electrical device!
- Be sure to use the correct power supply.
- Always use an approved power adapter.



The power adapter requires a fluctuation-free and uninterrupted power supply. If you have any questions, consult your local electricity supply company.

The power adapter must be fitted with a grounded (earthed) plug.

Never pull on the cable to unplug the power supply – always pull the plug itself.

Disconnect the external power supply (power adapter or car adapter) before cleaning the computer.

- Notes on Using Batteries



Only use batteries designed exclusively for use with this computer.

Recharge batteries via the notebook.

Do not attempt to repair faulty batteries yourself. Entrust repairs to your dealer or qualified service personnel.

Keep damaged batteries away from children and dispose of them properly as soon as possible. Exercise caution in handling damaged batteries. Batteries may explode if exposed to fire or improperly handled or disposed of.

The notebook is provided with a battery. The battery is recyclable. It is prohibited by law to dispose of the battery in ordinary household waste. If you have questions concerning proper disposal, consult your garbage collection service.

-
- Note on the System Clock Battery



Caution: There is a risk of explosion if batteries are replaced incorrectly. Replace the battery only with a battery recommended by the manufacturer or with a battery of the same type. Dispose of the battery according to the manufacturer's instructions.

- Servicing

Do not service your computer yourself! You could invalidate your warranty rights and expose yourself and the device to the risk of electrical shock. If servicing is required, consult qualified service personnel. Disconnect the computer from the power supply.

If the following problems occur, consult qualified service personnel:



- Power adapter or power cable is damaged or frayed.
- Liquid has entered the computer.
- Despite operating it correctly, the computer is not functioning properly.
- The computer has been dropped or damaged.

- Cleaning

Never apply cleaning agents directly to the computer. Use only a soft, lint-free cloth. Never use volatile (petroleum distillates) or scouring cleaning agents.

Wireless LAN

(wireless network - abbreviation = WLAN)

Your notebook may contain a wireless LAN module (optional). This module allows you to set up a wireless-based network, and to connect to an existing wireless network. It works according to the IEEE802.11b+g standard.

WLAN technology allows users to set up wireless connections inside a local area (e.g. in a company or campus building, or in a public building such as an airport). WLANs can be used in temporary offices, in locations where it is not possible to set up extensive cable installations, or to extend an existing LAN so that users in different parts of a building can work at different times.

There are two different ways to operate a WLAN.

In fixed WLANs, wireless stations (devices with radio network cards or external modems) set up connections with wireless access points, which act as bridges between the stations and the existing network backbone. In Peer-to-Peer (ad hoc) WLANs several users can set up a temporary network within a limited area such as a conference room, without using access points, and providing there is no need to use network resources.

In 1997 the IEEE confirmed the standard 802.11 for WLANs; this set a data transfer rate of from 1 to 2 Mbit/s (Megabits per second). With 802.11b, the new governing standard, the maximum data transfer rate is 11 Mbit/s over a frequency band of 2.4 GHz (Gigahertz).

Additional safety notes for units with wireless LAN

If a wireless LAN module is integrated in your notebook, it is essential that you observe the following safety information when using your notebook:



- Switch off the Notebook when you are in an aircraft or while driving a car.
- If you are in a hospital, an operating room or close to an electronic medical system, switch off the wireless components in the Notebook! The radio waves which are transmitted could disrupt the working of the medical equipment.
- Keep the Notebook at least 20 cm away from a heart pacemaker, otherwise there is a risk that the radio waves could disrupt the normal working of the pacemaker.
- The radio waves which are transmitted could give rise to interference noise in hearing aids.
- When its radio components are switched on, do not place the Notebook close to inflammable gases or in an environment which could be at risk of explosion (e.g. paint shop), since the radio waves which are transmitted could set off a fire or an explosion.
- The range of the wireless connection depends on the environmental and other ambient conditions.
- When transferring data over a wireless connection, unauthorized Third Parties can also receive the data.

MAXDATA Computer AG is not responsible for disruptions to radio or television reception which are caused by unauthorized alterations to this unit. MAXDATA also accepts no responsibility for the replacement or the exchange of connecting cables and units which were not specified by MAXDATA Computer AG. The user alone is responsible for the elimination of disruptions caused by this type of unauthorized alteration; he is also responsible for the replacement or the exchange of the units.

CE-labelling for units with wireless LAN



As delivered, this device complies with the requirements of the Guideline 1999/5/EG of the European Parliament and of the Council dated the 9. March 1999 concerning radio equipment and telecommunications facilities, and the mutual recognition of conformity.

This Notebook may be used in Belgium, Denmark, Germany, Finland, France, Greece, Great Britain, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Sweden, Switzerland, Spain, Iceland, Liechtenstein and Norway.

Current information on any possible restrictions in its operation can be obtained from the appropriate authorities in each country. If your country is not included in the above list, then please contact the appropriate supervising authority, in order to check whether the use of this product is permitted in your country.

Belgium - www.bipt.be
Denmark - www.tst.dk
Germany - www.regtp.de
Finland - www.ficora.fi
France - www.art-telecom.fr
Greece - www.eett.gr
England - www.oftel.gov.uk
Ireland - www.comreg.ie
Italy - www.agcom.it
Luxembourg - www.etat.lu/ILT

Netherlands - www.opta.nl
Austria - www.rtr.at
Portugal - www.urt.gov.pt
Sweden - www.pts.se
Switzerland - www.bakom.ch
Spain - www.cmt.es
Iceland - www.pta.is
Liechtenstein - www.ak.li
Norway - www.npt.no

UK

Restrictions

France

Restricted frequency range: In France, you may only use channels 10 to 11 (2457 MHz or 2462 MHz). It is forbidden to use the unit outside of enclosed areas.

Info: www.art-telecom.fr

Italy

An official authorization is also required to use the unit in internal areas. For more detailed information about the necessary procedure to do this, please contact your provider.

It is forbidden to use the unit outside of enclosed areas.

Info: www.agcom.it

Netherlands

A licence is required to use the unit in the open. For more detailed information about the procedure to be followed for this, please contact your provider.

Info: www.opta.nl

Radio frequencies for units with wireless LAN

The following information was correct at January 2002. You can obtain current information from the appropriate authorities in your country (e.g. www.regtp.de).

FREQUENCIES

Radio network cards and adapters are designed in accordance with IEEE-Standard 802.11b for use in the ISM frequency band (Industrial, Scientific, Medical) between 2.4 and 2.4835 GHz. Because of the DSSS-procedure (Direct Sequence Spread Spectrum), each of the 11 usable radio channels takes up a width of 22 MHz; this means that up to three, independent channels are available (e.g. 3, 8 and 11). The following table lists the authorised channels in your country:

Channel	MHz	Europe, R&TTE	France, R&TTE
1	2412	X	
2	2417	X	
3	2422	X	
4	2427	X	
5	2432	X	
6	2437	X	
7	2442	X	
8	2447	X	
9	2452	X	
10	2457	X	X
11	2462	X	X

UK

Legal requirements - exception clauses

EXCEPTION CLAUSES FOR UNITS WITH WIRELESS LAN

The installation and use of an unit with Wireless LAN may only take place when in accordance with the instructions contained in the user documents. The user documents are included in the material supplied with the product. All alterations or modifications made to this unit which are not expressly authorised by the manufacturer may lead to cancellation of the right of the user to operate the unit. The manufacturer is not liable for radio disruptions during the reception of radio and television signals which are due to non-authorised alterations to the unit or to the exchange or connection of cables and accessories, where these are not in accordance with the recommendations of the manufacturer. It is the responsibility of the user to remove any interference which may arise as a result of any non-authorised alterations, or the addition or replacement of components. Neither the manufacturer nor his authorised dealer and wholesaler are liable for damages or breaches of legal regulations which result from an infringement of these guidelines.

Shipping Contents

Before you begin installing your notebook, make sure that all components are present. If any item listed in the shipping contents is missing from your computer package, please contact your dealer immediately.

- Notebook
- Battery
- Utility CD
- Power adapter
- Power cable
- User guide
- CD/combo or DVD-ROM drive (built-in)
- Modem cable

Please retain the original packaging in case you need to send the device for repairs or upgrades. Please store the packaging safely.

UK



Preparation

Before first using the computer, make sure you are familiar with the individual components of your system.

Slide the release catch (1) to the right and open the display.

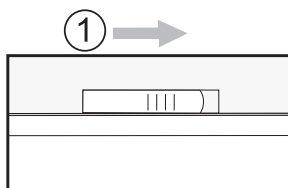


Figure 1

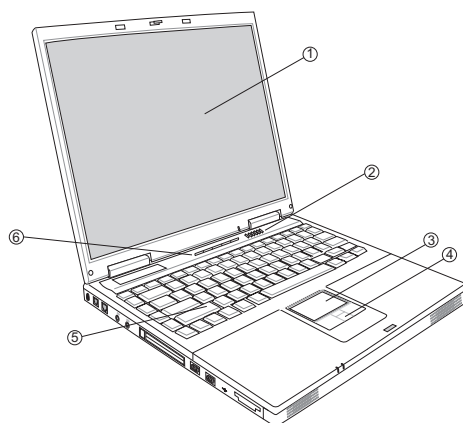


Figure 2

- (1)** LCD display
- (2)** Status LEDs
- (3)** Touch pad
- (4)** Touch pad keys and scroll pad
- (5)** Keyboard
- (6)** ON/OFF button and quick launch keys

Inserting the Battery

The battery is included in the notebook's shipping contents. This battery is only partially charged.

Note that a fully uncharged battery requires 3.5 hours to charge up when the notebook is switched off, and 6 hours when the notebook is switched on.



It is absolutely essential to fully charge the battery for initial operation! Do not unplug the power adapter until the battery is fully charged.

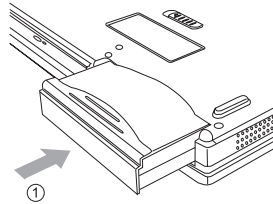


Figure 3

- (1) Insert the battery into the battery slot. Insert the battery into the battery slot in the direction of the arrow (1). Gently push the battery until it locks into place.

The battery can now be charged.

Removing the Battery

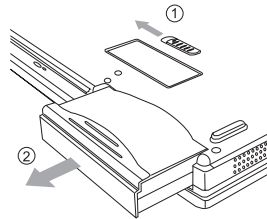


Figure 4

Slide the release catch (1) in the direction of the arrow. The battery is released.

Slide the battery out of the holder (2).

You can now operate the notebook using the power adapter alone.

Power Supply

The notebook is supplied with a power cable and a universal, self-adjusting power adapter. The power adapter can operate with any constant voltage between 100 and 240 volts.

To use the power adapter:

1. Connect the power adapter to the DC IN socket on the computer.
2. Connect the power cable to the power adapter.
3. Connect the power cable to a power outlet.



You can choose to run the notebook via battery or power supply. The first time you use the computer, you need to use the power adapter. Use only the supplied power adapter. Using the wrong power adapter can cause damage to the computer. The power adapter contains no serviceable parts.

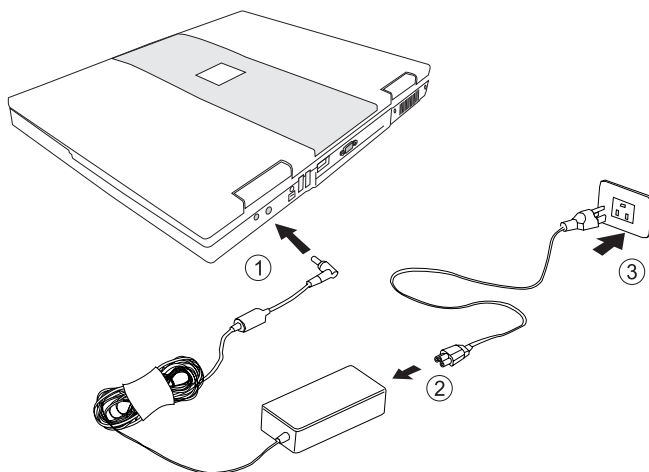


Figure 5



**NEVER OPEN THE
POWER ADAPTER!**

**RISK OF FATAL
INJURY!**

Switching the Computer on

You've now completed the preparations. Now press the ON/OFF button to switch on the notebook.

Tip:

If you experience a program or system crash, press the following key combination:

Ctrl + Alt + Del

In most cases, only the task that has crashed will be ended or the computer will be re-started (warm restart).

If this does not work, hold down the on/off button for more than four seconds – this will switch off the computer. You can now restart the computer in the normal fashion (cold restart).

Once the computer is switched on, the on/off button can perform several functions depending on the energy settings. In the standard setting, pressing the on/off button again will switch off the computer.

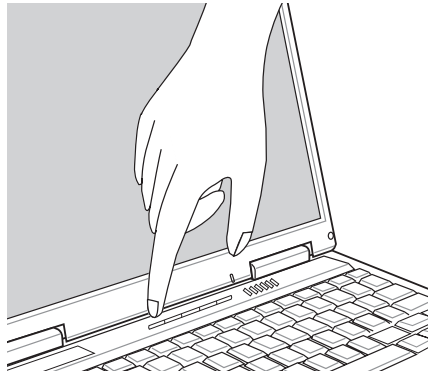


Figure 6



Please note that with Microsoft® Windows® operating systems you should always switch off the computer as follows:

Click the Start button.

Select Shut Down.

Click OK.

This avoids any problems with the hard disk and operating system.

The operating system is turned on the first time you switch on the computer. Please follow the installation instructions from the operating system at this point.

After installing the operating system and restarting, the computer is ready to use.

You can change some of the basic display settings such as the resolution, color depth and desktop background image.

You can find more detailed information on this point in the installation instructions.

Power Management

Your system is compatible with the ACPI power saving system.

The basic power management settings can be found under the following in Microsoft® Windows® operating systems: <Settings> <Power Options>. If you have questions, use the Microsoft® Windows® Help function.

Here you can set the behavior separately for various battery charge levels.

Standby: – low energy consumption –

The display is dimmed and the hard disk remains unchanged. The power LED flashes. By pressing the on/off button, the computer returns to the normal operating state. The user must log on again.

Sleep: – without power adapter no energy consumption –

The current operating state is saved to the hard disk; the computer is switched off. All open documents or applications become available again when the computer is switched on.

Switching off the notebook and disconnecting it from the power supply (pulling the plug of the power adapter) can prevent any energy consumption.

- Note on PC cards:



Never remove a PC card while the system is in save-to-disk mode. This deactivates the PC slot, thus changing the system configuration. This can lead to problems the next time the computer is started.



System Overview

Left Side




Figure 7

- (1) Kensington Lock ant-theft device
- (2) Modem port
- (3) Network port
- (4) Microphone socket (mono)
- (5) Headphone socket
- (6) PC card slot with release catch
- (7) USB ports
- (8) Memory card slot

UK

Right Side




Figure 8

- (1) CD/combo or DVD-ROM drive

Rear View



Ensure that all of the ventilation openings are uncovered at all times. Otherwise the notebook can over-heat.

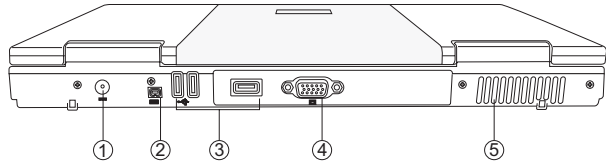


Figure 9

- (1) Power adapter socket
- (2) IEEE 1394 port
- (3) USB ports
- (4) Connector for external monitor
- (5) Ventilation openings

Underside



All air intake and ventilation openings must be kept free from obstructions at all times. If not, the device is liable to overheat.

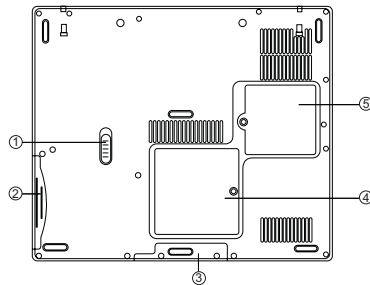


Figure 10

- (1) Battery release catches
- (2) Battery slot
- (3) Hard disk slot
- (4) 2nd RAM cover
- (5) Mini PCI card cover

Explanation of LED Indicators

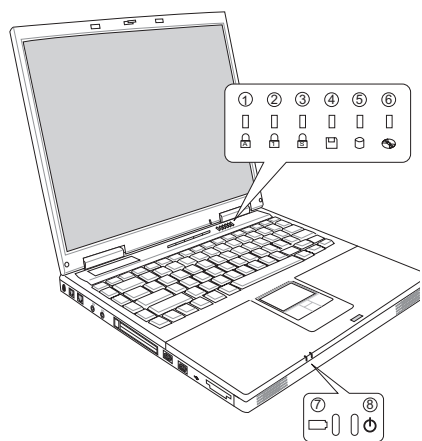


Figure 11

Table 1

Symbol	Meaning
	Lights when Caps Lock is on.
	Lights when Num Lock is on.
	Lights when Scroll Lock is on.
	Not occupied.
	Lights when hard disk is accessed.
	Lights when optical disk is accessed.
	Lights red when battery is charging, regardless of whether computer is on or off. Lights green when the battery is charged and the power adapter is turned on and connected. Flashes green to indicate that battery charging level is low.
	Lights up when the notebook is turned on. Flashes in power save mode.

Hot Keys

(Shortcut key combinations with special functions)

To activate the hot keys, press and hold down the Fn key and then press the desired additional key.

Table 2

Symbol	Keys	Meaning
	Fn + F1	Switches computer to power save mode
	Fn + F2	Switches WLAN function on/off
	Fn + F3	Switches between LC display/ monitor/ both
	Fn + F4	Reduces LCD brightness
	Fn + F5	Increases LCD brightness
	Fn + F6	Mutes the notebook
	Fn + F7	Reduces volume
	Fn + F8	Increases volume
	Fn + F9	Pause/ continue media player
	Fn + F10	Stop media player
	Fn + F11	Media player: previous title
	Fn + F12	Media player: next title

Quick Launch Buttons

There are three quick launch buttons located above the keyboard. You can use these to launch frequently used applications.

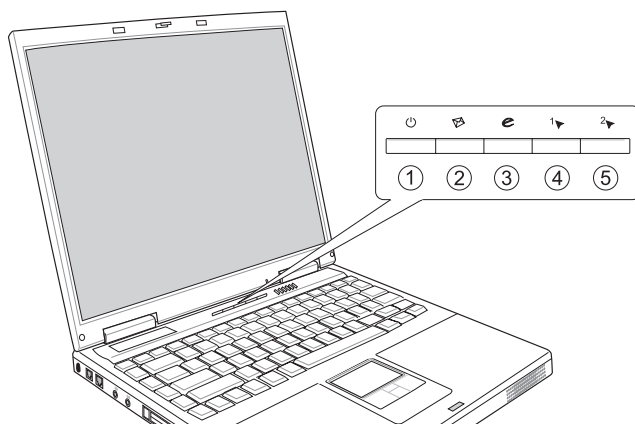


Figure 12

- (1) ON/OFF button
- (2) E-mail – starts e-mail program
- (3) Internet – starts Internet browser
- (4), (5) Freely programmable:
can be freely configured using Quick Launch button software. The Quick Launch button software can be accessed using the MAXDATA symbol in the task bar of the operating system.

The Keyboard

Your notebook's keyboard has all the functions of a normal AT-compatible keyboard plus some extras:

Typewriter

These keys correspond to a typewriter's keys.

Function keys

In many operating systems (and applications), special functions are available via these keys. You can find more detailed information on this in the relevant handbooks.

Special keys

These keys (and key combinations) are used for controlling various hardware functions.

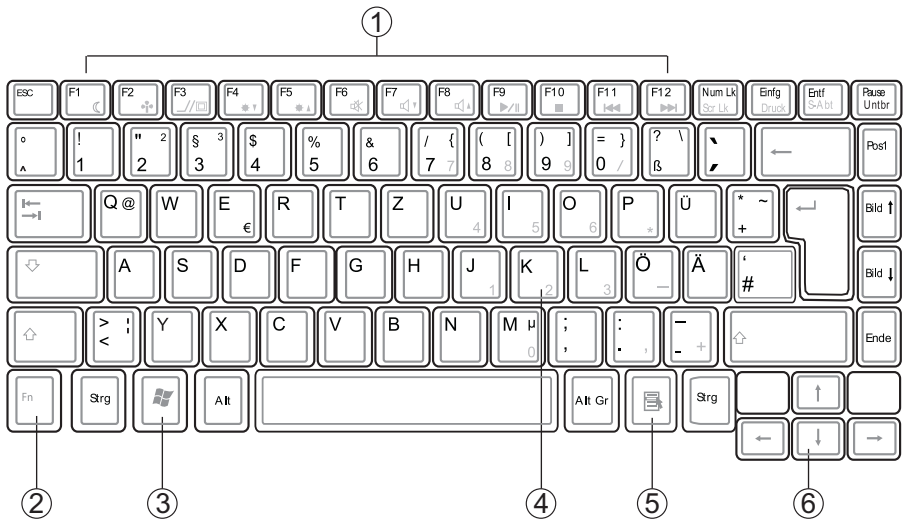


Figure 13

- (1) Function keys – for more on functions, see table 2 (hot keys)
- (2) Fn key
- (3) Microsoft®Windows® key
- (4) Numerical keypad (press Num Lock key to activate this field)
- (5) Microsoft®Windows® key
- (6) Arrow keys

The TouchPad

The system automatically sets up the integrated TouchPad. If you are using Microsoft® Windows®, no driver needs to be installed for the basic functions.

- (1) Scroll buttons – work like a mouse wheel
- (2) Right 'mouse' button
- (3) Left 'mouse' button
- (4) Sensor field

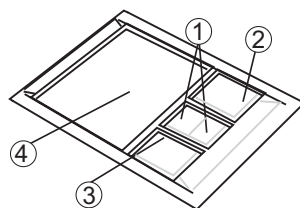


Figure 14

Note for lefthanded users: most operating systems enable reversal of the mouse buttons.

The TouchPad - Operation

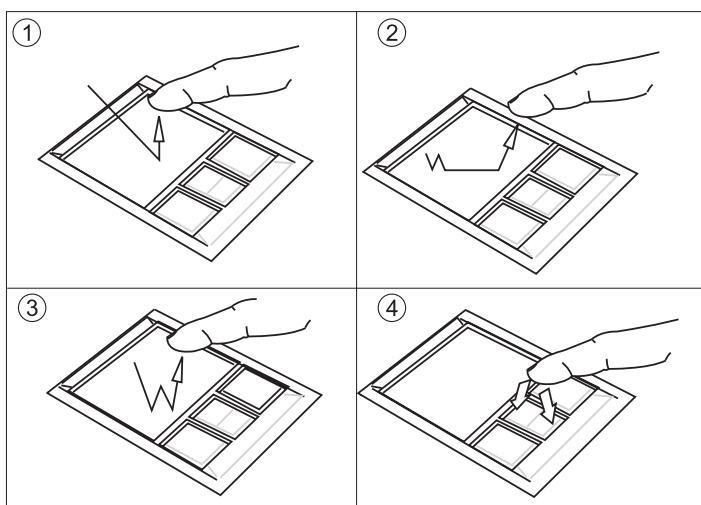


Figure 15

- (1) Select
- (2) Select, drag and drop
- (3) Double-click – to execute/ open files
- (4) Scrolling

When using the TouchPad, make sure it as well as your finger are clean and dry. The TouchPad reacts to finger movements. The lighter it is touched, the better it reacts. Pressing hard will not increase its accuracy.

The CD-ROM/DVD Drive

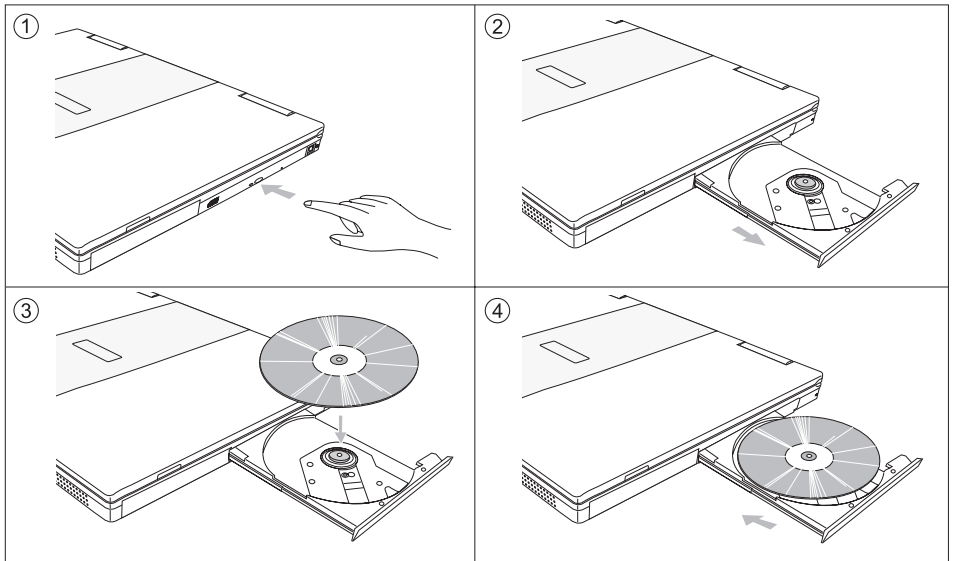


Figure 16

- (1)** To unlock a CD, press the release catch on the front side of the drive.
- (2)** The tray is unlocked must be pulled out manually.
- (3)** Place CD on spindle with label facing up and push gently until it locks on.
- (4)** Press the CD tray back until it snaps into place. The CD is now ready to read.

Some CDs have an autostart function. This means that installation programs or music CDs automatically run after you place them in the drive.

The PC Card Slot

The computer is equipped with a PC card slot. This is a PCMCIA 3.3 V/5 V slot of type I/II/III. To insert a PC card, push it into the slot until it locks into place. Make the connection you require (for example, network connection). Consult the documentation from the relevant card.

To remove the card, push the eject button next to the slot. This causes the button to pop out. Push it again to eject the PC card.

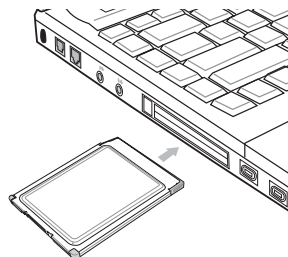


Figure 17

Memory Card Slot

The computer is provided with a combination slot. This slot accepts memory sticks and SD (secure digital) cards.

Insert these cards into the slot with the printed side upwards.

After the card snaps into place, it is recognized as an additional drive and you can access the data.

To remove the card, simply pull it out.

Never remove the card while writing or reading data.



DO NOT use the "Safely Remove Hardware" function to remove the memory card! In this case, you have to restart the system to reactivate the combo slot.

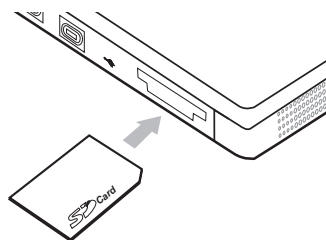


Figure 18

The Data/Fax Modem

The system automatically sets up the integrated analog modem. To use the modem functions, connect the modem socket to an analog telephone socket (not ISDN) using the telephone cable.

Proper use:

The modem can be connected to all analog sockets (TBR 21) in Europe.

It is to be used solely for data communication purposes.



Do not attempt to connect the modem to an ISDN telephone socket! This would result in serious damage to the device.

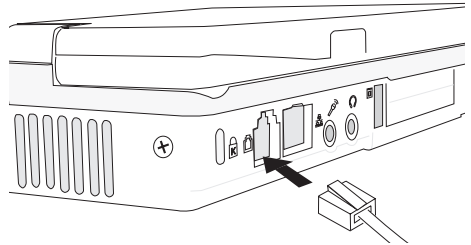


Figure 19

The LAN Port

The built-in network adapter enables your computer to connect to the Internet via a 10/100 Mbps network or DSL.

The connection is made via an Ethernet network cable and RJ-45 connectors. These are inserted on the back of the computer and into an available network hub or DSL socket.



Under no circumstances should you confuse a network cable RJ-45 connector with an ISDN connector! NEVER attempt to connect the LAN adapter to an ISDN telephone socket! This would result in serious damage to the device.

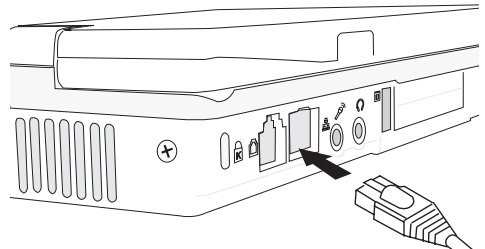


Figure 20

Autodim Function

Your notebook has been equipped with an autodim function.

This energy saving function will dim down the display automatically when the user switches to battery operation, e.g. by removing the power plug.

Should the display brightness not be according to your needs, you can change the brightness level manually by carrying out the following procedures:

Increasing the brightness level:

Press down the function key (Fn), keep it pressed and press the F5 key to increase the brightness level manually.

Decreasing the brightness level:

Press down the function key (Fn), keep it pressed and press the F4 key to decrease the brightness level manually.



Installation Instructions

Restoring the Drivers

Your system is supplied in a preloaded condition. This means that all the data and drivers that the system requires are already on the hard disk. In case you erase and/or format your hard disk drive, the system drivers are stored on the Utility CD supplied with the computer. After reinstalling the operating system (for example, with the Recovery CD), this allows you to restore your notebook to a usable condition.

The Utility CD

The Utility CD will run automatically after you place it in the drive. If this is not the case, you can run the CD as follows: select <My Computer> <CD Drive> and then the "utility.exe" file.

You can select the driver that you want to install in the "Drivers" -section.

Recommended: All of the drivers listed from top to bottom.

In addition, you can later install the advanced functions you require in the "Utility" section.

UK



Specifications

Processor

- Intel® Celeron® M to 1.5 GHz
- Intel® 852GM chipset

RAM

- Main memory expandable to 1 GB DDR SDRAM
(Only allow qualified service personnel to expand the main memory)
- Two PC2100 (DDR 333) SODIMM sockets

Display and Video

- 15" inch XGA TFT display. Supports 1024 x 768 resolution with up to 16.7 million colors
- Intel® 852GM graphic controller – AGP 4X
- Simultaneous LCD/ external monitor
- External monitor:
Supports up to 1280 x 1024, 16.7 million colors, up to 72 Hz

Memory Capacity

- An external USB diskette drive (3.5", 1.44 MB) (optional)
- An E-IDE hard drive (2.5", 9.5 mm)
- An internal CD or DVD or combo drive
- A memory card reader for memory sticks and SD cards

Audio

- AC97-compatible stereo sound with 3D effects
- Built-in stereo loudspeakers

Modem

- High-speed 56 Kbps V.92 fax/data software modem

LAN

- Fast Ethernet function for 10Base-T and 100Base-TX network standards
Support for PXE 2.1
- Intel® PRO 802.11b+g wireless network connection (optional)
- MSI MS-6833 802.11b+g wireless network connection (optional)

Input Devices

- 88-key Microsoft® Windows® keyboard
- Ergonomic touchPad with scroll key
- Four quick launch keys

Ports

- One 15-pin VGA port
- One headphone output socket
- One microphone input socket (mono)
- Five USB ports
- One standard telephone socket (RJ-11)
- One standard network port (RJ-45)
- One DC IN socket
- One IEEE1394 i.Link port
- One type I/II/III PC card slot
- One PS/2 port

Power Supply

- Main battery Li ion 65 watts
- AC power adapter 100–240 V, AC 50–60 Hz, 60 W
- Recharging System OFF: 3.5 hours (95%)
 System ON: 6 hours (95%)
- Battery power with low battery warning
- Suspend/ re-use capability

Operating System

- O/S Microsoft®Windows® 2000/XP

Other Data

- Dimensions 268 (T) x 330 (B) x 40 (H) in mm
- Weight: 2.75 kg (depending on model)
- Operating temperature: 5 to 35 °C
- Operating humidity: 20 to 80% RH
- Storage temperature: -10 to 65 °C



Fault Diagnosis and Troubleshooting

If a problem occurs while working with your computer, first of all try using the following information to solve the problem. If the problem persists, switch off the system for several minutes and then restart it. You will lose all unsaved data, but the system may work properly again. Subsequently contact your dealer or customer support agent.

Despite pressing the power switch the computer remains switched off.

Possible cause of the problem:

- The battery is missing or is incorrectly installed.

Note:

- The power on LED is not lit.

Troubleshooting:

- Make sure that the battery is in the battery compartment and is inserted properly.
- Check that the battery terminals are making direct contact.
- Connect your notebook to the power adapter so that the battery (if present) can recharge.

Possible cause of the problem:

- Battery level low.

Note:

- The battery display LED flashes.

Troubleshooting:

- Operate the computer using the power adapter. If the system does not immediately start up, switch off the computer and then restart it.

The screen is not working.

Possible cause of the problem:

- The energy saving mode is activated.

Note:

- The suspend LED flashes.

Troubleshooting:

- Press the on/off button.

Possible cause of the problem:

- The screen settings are incorrect.

Troubleshooting:

- Press the spacebar, several times if necessary.
- If an external monitor is connected, switch it on.

Possible cause of the problem:

- In the System Settings, a screen type other than the existing one has been set.

Troubleshooting:

- Press the Fn + F3 key combination.
- If an external monitor is connected, connect this to a power source and switch it on. Also check the brightness and contrast settings.

The system stops working.

Possible cause of the problem:

- An energy saving function has been activated.

Note:

- The screen switches itself off.

Troubleshooting:

- Press any key, or press the on/off button if none of the status LEDs are lit.

Possible cause of the problem:

- A software error has caused a system crash.

Troubleshooting:

- Additional information is available in the operating system handbook.
- If you cannot remedy the problem, restart the system. You will lose any unsaved data! If this doesn't work either, briefly switch off the computer and then switch it back on again.



Each time the system starts, it carries out a self-test (POST). If an error occurs, an error message appears, briefly describing the problem.

Index

A		
Accuracy	79	
ACPI power saving system	71	
Additional key	76	
Arrow keys	78,88	
Autodim Function	83	
Autostart	80	
B		
Battery	68	
Brightness	76	
C		
Caps Lock	75	
Car adapter	57	
Charge up	68	
Cleaning	57	
Cold restart	70	
Color depth	70	
Combination slot	81	
Ctrl + Alt + Del	70	
D		
Damage	57	
Data/Fax Modem	82	
DC IN socket	69	
Dealer	64	
Drivers	85	
E		
E-mail	77	
Energy consumption	71	
Energy settings	70	
External monitor	87	
F		
Fault diagnosis	91	
Finger movements	79	
Fn key	78	
Function keys	78	
G		
Garbage collection service	57	
H		
Headphone	73	
Hot Keys	76	
Household waste	57	
I		
Installation instructions	85	
Internet	77	
ISDN connector	82	
K		
Keyboard	88	
L		
LAN Port	82	
LED indicators	75	
Lefthanded users	79	
Liability	53	
Liquid	58	
M		
Memory card slot	81	
Memory stick	81	
Microphone	73	
Modem socket	82	
Moisture	57	
N		
Network	82	
Network adapter	82	
Network cable	82	
Num Lock	75	
O		
ON/OFF button	67	
Operating state	71	
Operating system	71	
Original packaging	65	

P		U	
PC card slot	65,88	USB	87
Power adapter	69	Utility	85
Power cable	58	Utility.exe	85
Power outlet	69	Utility CD	85
Power save mode	76		
Power supply	58	V	
Preloaded	85	Ventilation openings	74
		Volume	76
Q			
Qualified service personnel	58	W	
Quick launch buttons	77	Warm restart	70
		Warranty rights	58
R			
Reinstalling	85		
Release catch	67		
Resolution	70		
Restart	91		
Restoring	85		
S			
Scroll Lock	75		
Scroll pad	67		
SD card	87		
Secure digital	81		
Sensor field	79		
Shipping contents	65		
Shocks	67		
Shocks/Vibrations	57		
Sleep	71		
Special keys	78		
Standby	71		
Sunlight	57		
Switch on	70		
Symbols	55		
System crash	70		
T			
Touch pad	67		
Touch pad keys	67		
Tray	80		
Typewriter	78		